

SUPPORT +5V SYNC MODEL LIST

ASUS 	GIGABYTE 	MSI 	ASROCK 
ROG STRIX B450-I GAMING	Z390 AORUS XTREME WATERFORCE	MPG Z390 GAMING EDGE AC	B450-M STEEL LEGEND
ROG STRIX Z390-F GAMING	Z390 AORUS XTREME	MPG Z390 GAMING PRO CARBON AC *1	Z390 EXTREME4
ROG STRIX Z390-E GAMING	Z390 AORUS MASTER	MPG Z390 GAMING PRO CARBON *1	X570M Pro4
ROG STRIX Z390-I GAMING	Z390 AORUS PRO WIFI	X570 GAMING PRO CARBON WIFI	X570 Phantom Gaming-ITX/TB3
ROG MAXIMUS XI HERO(WI-FI)	Z390 AORUS ULTRA	X570 GAMING EDGE WIFI	X470 Taichi
TUF Gaming X570 Plus(WiFi)	Z390 AORUS PRO	Z390 GAMING EDGE AC	X470 Master SLI/ac
ROG STRIX B360-F GAMING	Z390 AORUS ELITE	B360 PRO CARBON	B450 Steel Legend
ROG MAXIMUS XI GENE	Z390 I AORUS PRO WIFI		B450M Steel Legend
ROG RAMPAGE VI EXTREME OMEGA	X299 AORUS MASTER		Fatal1ty B450 Gaming K4
ROG STRIX Z370-G GAMING	X299 DESIGNARE EX		B450M Pro4
ROG MAXIMUS XI HERO (WI-FI) Call of Duty - Black Ops 4 Edition	X299 AORUS Gaming 7 Pro		Z390 Taichi Ultimate
	X299 AORUS Ultra Gaming Pro		Z390 Taichi
	X299 AORUS Ultra Gaming		Z390 Extreme4
	X299 AORUS Gaming 3 Pro		Z390 Steel Legend
	X299 UD4 EX		Z390 Phantom Gaming 6
	X299 UD4 Pro		Z390 Phantom Gaming SLI
	X299 UD4		Z390 Phantom Gaming-ITX/ac
	X299 AORUS Gaming		B365 Phantom Gaming 4
	H370 AORUS GAMING 3 WIFI		B365M Phantom Gaming 4
	H370 AORUS GAMING 3		Fatal1ty B360M Performance
	H370N WIFI		X399 Phantom Gaming 6
	B360 AORUS GAMING 3 WIFI		
	B360 AORUS GAMING 3		
	B360 HD3P		
	B360 M AORUS PRO		
	B360M AORUS GAMING 3		
	B360N AORUS GAMING WIFI		
	Z370 AORUS Gaming 7		
	Z370 AORUS Gaming 5		
	Z370 AORUS ULTRA GAMING WIFI-OP		
	Z370 AORUS ULTRA GAMING 2.0		
	Z370 AORUS Ultra Gaming		
	Z370 AORUS Gaming 3		
	Z370 AORUS Gaming K3		
	Z370 AORUS GAMING WIFI		
	Z370 UD3H		
	Z370N WIFI		
	X399 AORUS XTREME		
	X399 DESIGNARE EX		
	X399 AORUS Gaming 7		
	X399 AORUS PRO		
	X470 AORUS GAMING 7 WIFI		
	X470 AORUS GAMING 5 WIFI		
	X470 AORUS ULTRA GAMING		
	B450 AORUS PRO WIFI		
	B450 AORUS PRO		
	B450 AORUS ELITE		
	B450 AORUS M		
	B450 I AORUS PRO WIFI		

*1:Please apply adapter to JCORSAIR socket in order to SYNC with the M/B. May contact local M/B vendor for the adapter.